

Alfa Laval A814

Disc stack separator for the dairy industry

Introduction

For more than 130 years, Alfa Laval has been supplying disc stack separators for the dairy industry. Today Alfa Laval has the most complete and diverse offering of separators, each fully optimized for its specific duty.

Alfa Laval's range of disc stack separators has been setting the standards for gentle and efficient separation meeting the strictest hygiene and performance requirements of modern dairies.

Application

Self-cleaning disc stack separators in the A series are specially designed for final concentration of high fat cream, after phase inversion, in an anhydrous milk fat process (AMF). Cream is concentrated in several steps. In the final separation stage, the hermetic design enables concentrations of up to 99.5 % fat.

Benefits

- Gentle treatment of the product
- · High separation efficiency
- Low power consumption
- Foam-free handling in absence of air
- No oxygen pick-up
- Corrosion resistant
- Designed with focus on CIP
- · Easy to operate

Design

The A814 is available in different scopes of supply from a bare separator to a complete separation system.

The unique fully hermetic bottom fed design ensures very gentle treatment of the product and the hermetically sealed inlet and outlet prevent oxygen pick-up. Smooth acceleration of feed in the hollow rotating spindle helps maintain the sizes of the fat globules and other components. The hermetic design not only enhances separation efficiency, but also prevents increase of free fatty acids in the product, which might otherwise result in bad flavour, taste and a shortened shelf life. In addition to these benefits, the hermetic design offers the lowest power consumption in the market.

All parts in contact with the product are in compliance with European food contact material regulation - (EC) No. 1935/2004. The metallic product contact parts are made of



high-grade stainless-steel ensuring corrosion resistance and the non-metallic product contact parts, including gaskets and seals, are made of materials according to FDA requirement. The model is available with certification according to 3-A sanitary standard for Centrifugal Separators and Clarifiers.

Scope of supply

- Disc stack separator
- Cyclone

Options


- Foundation plate
- Set of tools
- Intermediate service kit

Working principle

The phase inverted cream is continuously fed from the bottom into the rotating separator bowl through the hollow drive

spindle. Separation takes place between the bowl discs due to the centrifugal force. The butter oil moves towards the centre of the bowl and the butter milk towards the periphery. The separated liquids are pressurized by the impellers in the outlet housing and thereby working as a centrifugal pump.

Separated sludge is collected in the sediment space and is discharged intermittently via the cyclone. While the sludge is accumulating in the sediment space, the sliding bowl bottom is kept closed against the bowl hood by means of operating water. The sliding bowl bottom lowers, while the machine is operating at full speed, to discharge separated sludge through the discharge ports. The sequential pulses of operating water are used to control the movement of the sliding bowl bottom part that opens and closes the discharge ports.

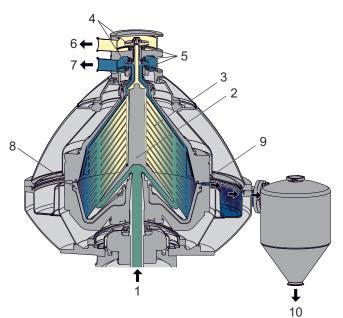

Typical bowl drawing. The details illustrated do not necessarily correspond to the separator described.

- 1. Inlet
- 2. Distributor
- 3. Disc stack
- 4. Impeller
- 5. Hermetic seal
- 6. Light liquid phase outlet
- 7. Heavy liquid phase outlet
- 8. Sliding bowl bottom
- 9. Sludge discharge ports
- 10. Sludge outlet from cyclone

Technical data

Feed inlet

Bowl


| Performance data | |
|-----------------------|--|
| Line capacity | From cream: 14 000 kg oil / h (30 800 lb oil/h) |
| | From butter: 14 000 kg oil / h (30 800 lb oil/h) |
| Installed motor power | 25 kW (35 HP) |
| | |
| Main connections | |

ISO 2852 (Tri-Clamp) DN63.5

| Product outlet (heavy phase) | ISO 2852 (Tri-Clamp) DN63.5 |
|--------------------------------|------------------------------------|
| Product outlet (light phase) | ISO 2852 (Tri-Clamp) DN63.5 |
| Solids outlet | ISO 2852 (Tri-Clamp) DN100 |
| | |
| Material data | |
| Bowl body | Duplex Stainless Steel, EN 1.4462, |
| | ASTM/UNS S31803 |
| Gaskets (product wetted) | NBR (FDA approved materials) |
| | |
| Weights | |
| Separator incl. bowl and motor | 2 520 kg (5550 lb) |

1 200 kg (2640 lb)

Dimensional drawing

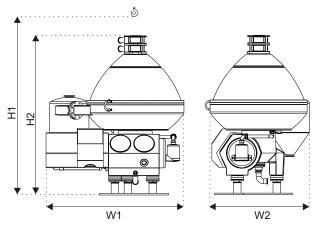

| Dimensions | | |
|-----------------------------|------------------------------|--|
| H1 (minimum lifting height) | 2 800 mm (9 ft 2 1/4 inches) | |
| H2 | 1 870 mm (6 ft 1 5/8 inches) | |
| W1 | 1 747 mm (5 ft 8 3/4 inches) | |
| W2 | 1 260 mm (4 ft 1 5/8 inches) | |

This document and its contents are subject to copyrights and other intellectual property rights owned by Alfa Laval Corporate AB. No part of this document may be copied, re-produced or transmitted in any form or by any means, or for any purpose, without Alfa Laval Corporate AB's prior express written permission. Information and services provided in this document are made as a benefit and service to the user, and no representations or warranties are made about the accuracy or suitability of this information and these services for any purpose. All rights are reserved.

200002000-1-EN-GB © Alfa Laval Corporate AB